

Designed for use
with the Molnar
Air Jacking Beam,
these accessories will improve
safety and functionality

AIR JACKING BEAM ACCESSORIES

**M
O
L
N
A
R**



HOISTS

PL92-RB



'RUBBER BLOCK, STANDARD'

Solid rubber block for
cushioned lifting
For use on Rubber Block Nest

Length _____ 150 mm _____
Width _____ 100 mm _____
Height _____ 70 mm _____

PL92-RB-40



'RUBBER BLOCK, LOW PROFILE'

For vehicles with low clearance
For use on Rubber Block Nest

Length _____ 150 mm _____
Width _____ 100 mm _____
Height _____ 40 mm _____

SLO2-NEST



'RUBBER BLOCK NEST'

Nest to house rubber blocks

Length _____ 160 mm _____
Width _____ 100 mm _____
Height _____ 120 mm _____

J3BP



'BEAM PAD'

Stabilises vehicles on beams
Made from solid, long-lasting
vulcanised rubber

Diameter _____ 90 mm _____
Pad Height _____ 30 mm _____

J3



'PICK UP PAD, SMALL'

Supports and stabilises vehicle


Diameter _____ 100 mm _____
Height - min _____ 30 mm _____
Height - max _____ 80 mm _____

more overleaf



AIR JACKING BEAM ACCESSORIES

EXT-PAD

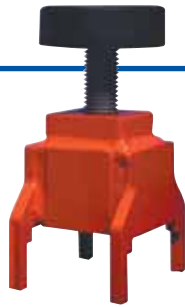

Provides valuable extra clearance for four-wheel-drives and vans

'BEAM RISER, STANDARD'

Length	120 mm
Width	100 mm
Height - min	170 mm
Height - max	215 mm

EXT-PAD-LOW



For vehicles with low clearance

'BEAM RISER, LOWERED'

Length	120 mm
Width	100 mm
Height - min	140 mm
Height - max	175 mm

AXLE-PU



For stable pick-up on axle; cradle head prevents lateral movement

'BEAM RISER, AXLE'

Length	120 mm
Width	100 mm
Height - min	150 mm
Height - max	205 mm

As the policy of Molnar Hoists is one of continuous improvement, the manufacturer reserves the right to change specifications without notice.

For more information, please contact us or your local Molnar Representative

T 08 7120 8700 **F** 08 8346 0097
E sales@molnarhoists.com.au
 www.molnarhoists.com.au



onwards & upwards

