

Nussbaum Power Lift HL 2.30 K

Hyperflow Pipe Connection Information

This information is for correct connection of Hyperflow hydraulic oil pipes utilising colour coded zip ties fitted on assembly.

The Master Cylinder is located in the Control Post, the Slave Cylinder in the Non-Control Post.

At the control post, master cylinder feed pipe (red zip ties, Picture 1) runs from the hydraulic block (in the power pack) to the top of the control post and down into the master cylinder.

The oil flows out of the top of the master cylinder via the slave feed pipe (no colour zip ties, Picture 1), connecting to the pressure switch and running down to feed the slave cylinder at the non-control post (yellow zip ties, Picture 2)

The overflow pipe (white zip tie, Picture 3) on the non-control post exits the top of the slave cylinder and returns to tank via the tank pipe (blue zip ties, Picture 1) on the control post.

Before completing installation and energizing the system, ensure ALL hydraulic fittings have been tightened.

For more information, contact
Molnar Hoists in Australia
Call 1300 665 627
www.molnarhoists.com.au

